


P.E.S. Low Profile Leads:

Proper application/removal of your P.E.S. Low Profile Leads:

1. Hold the **LOW PROFILE LEAD** in your hand with the **LOW PROFILE CONNECTION** held between the thumb and forefinger, making sure that the metal contacts are at the bottom side of the **LOW PROFILE CONNECTION** closest to the **ELECTRODE**.
2. Position the **LOW PROFILE CONNECTION** against the head of the **SNAP POST**. Lightly compress (pinch) the outside edges to open the contacts while exerting a slight downward motion. The **LOW PROFILE CONNECTION** will easily engage and be securely fastened.
3. For removal, perform the reverse procedure by compressing (pinching) the outside edges of the **LOW PROFILE CONNECTION** and removing with a slight upward motion.

Note: **DO NOT** attempt to apply the **LOW PROFILE CONNECTION** by force or to remove the **LOW PROFILE LEADS** by pulling on the lead wire. This will lead to failure of the **LOW PROFILE CONNECTIONS**.

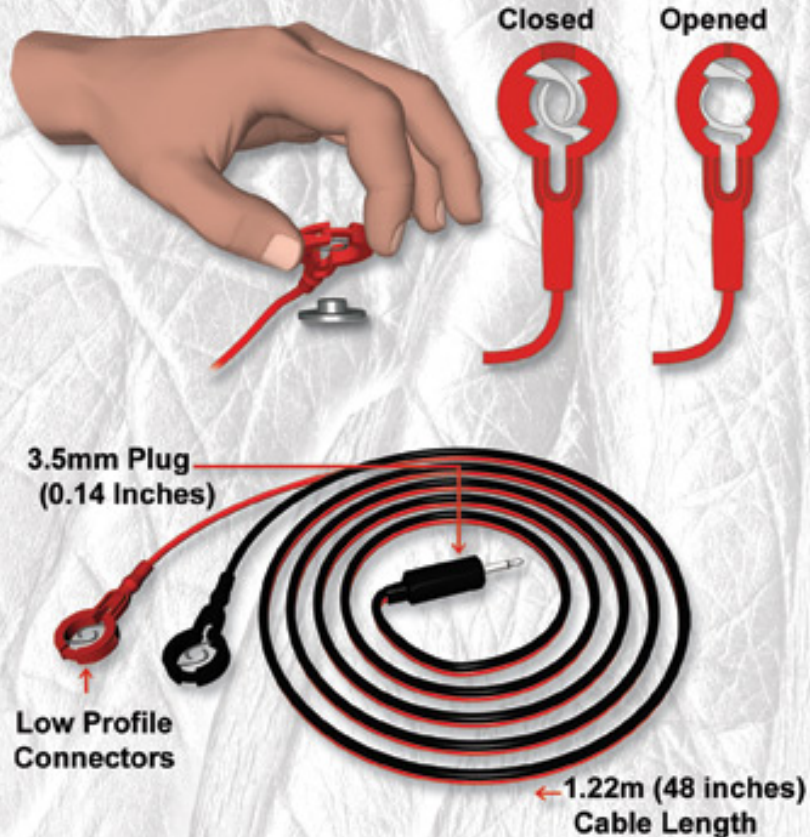

PES™

Original
Power Box



**Product Information
and Instruction Manual**

Welcome to the P.E.S. family. We hope that you enjoy your new P.E.S. product fully. To help you achieve that goal, we recommend that you read this manual. If you still have any questions after reading this manual, please do not hesitate to contact us.

Toll Free (US only): **(800) 339-6953**

Phone: **(702) 474-2991**

Fax: **(702) 474-4088**

Websites:

<http://www.peselectro.com>

<http://www.danteamore.com>

<http://www.thefetishboutique.com>

Email:

pesquestions@peselectro.com

Follow Us on Twitter:

<http://twitter.com/peselectro>

Like Us on Facebook:

<http://www.facebook.com/PES.Studio>

**Enjoy,
The Staff of P.E.S.**

Original P.E.S. Power Box:



Includes:

- Original P.E.S. Power Box
- Two pairs of P.E.S. Low Profile Leads
- One 12 volt 1.5 Amp A/C Adapter with US & EU blades

Instructions for the P.E.S. Power Box:

To properly experience the effects of EBOTIC ELECTRO STIMULATION, you need to learn how to properly operate your PES POWER BOX. A little reading, experimentation, & practice are all it takes to have a pleasurable experience. Here are the steps to follow each time you use your PES POWER BOX:

1. Start by making sure the ON/OFF switch on the left side of your PES POWER BOX is in the OFF/DOWN position.



2. Attach the LOW PROFILE LEAD(S) to the ELECTRODE(S) you are planning to use. (NOTE: HOW TO APPLY LOW PROFILE LEADS IS ON THE BACK OF THE MANUAL.)



3. Insert the 3.5MM PLUG on the end of your LOW PROFILE LEAD(S) into the jack for either CHANNEL A or B (located on the top edge of your PES POWER BOX).

7. Lubricate the ELECTRODE(S) & the area of the body to which you will be applying them. Apply the ELECTRODE(S) to your body according to the instructions for each ELECTRODE. (NOTE: LUBRICATION MAY VARY. PLEASE REFER TO THE ELECTRODE INSTRUCTIONS.)

4. For maximum power, use the included 12 VOLT 1.5 AMP A/C ADAPTER to power your PES POWER BOX. The input jack for the A/C ADAPTER is on the left side of the POWER BOX below the ON/OFF switch.



(NOTE: A 9V BATTERY CAN BE USED INSTEAD OF THE INCLUDED A/C ADAPTER.)

5. Check the controls on the face of the PES POWER BOX. There are four knobs on the face of the unit: COARSE (upper left), FINE (upper right), PULSE (bottom left), & FREQUENCY (bottom right).



6. All four knobs have numbers from 1 to 10 around them. Make sure the COARSE & FINE, both of which control the power, are set to 1. Set the PULSE & FREQUENCY knobs to 10.

8. Once you have applied your chosen ELECTRODE(S) & checked the power settings on your POWER BOX, turn on your POWER BOX by switching the ON/OFF switch to the ON/UP position. The LED indicators on the top face of the PES POWER BOX will light up.



IMPORTANT SAFETY NOTE: ALWAYS REMEMBER TO LOWER THE POWER LEVEL & TURN OFF THE PES POWER BOX EACH TIME YOU ADJUST, REMOVE, OR REINSERT ANY ELECTRODE.

9. With the switch in the ON/UP position, slowly turn the COARSE clockwise to a comfortable level.



(NOTE: Some users may find they turn this knob to 10. Do not panic, this isn't strange.)

10. Next, you can add more power by slowly turning the FINE clockwise. This increases the power in smaller increments in order to achieve the maximum amount of stimulation possible.

(NOTE: Your tolerance will increase with prolonged use, thereby requiring adjustment to higher levels.)



When you have found the COARSE & FINE settings you like best, move on to the FREQUENCY & PULSE knobs.

11. The FREQUENCY is the length of the electrical wave & specifically affects the erotic nerve bundles you are stimulating. With the FREQUENCY knob set at 10, you will feel a high level of tingling. As you lower the FREQUENCY, the sensation will change to a deeper, rumbling throb.



One way to understand this effect is to think of it as the treble/bass controls on your stereo. You will most likely find the HIGHER frequency settings more pleasurable; SMOOTHER; & the LOWER settings less pleasing; SHARPER.

12. With the **PULSE** set at **10**, a constant flow of **EROTIC ELECTRO STIMULATION** can be felt through the conductive surface(s) of the **ELECTRODE(S)**. As you lower the setting, you will notice a delay in the sensation, as indicated by the blinking **LED** lights. The lower the **PULSE** is set, the longer the delay. When you have found your optimal settings with the other control knobs, you can play with the effects by adjusting the **PULSE**.



Physiologically, the mind/body will tend to find a **HIGHER PULSE** setting more **PLEASURABLE** and a **LOWER PULSE** setting more **BITING**.

The **CHANNEL A & B POWER INTERRUPTS** can be used to temporarily cut off the power to your **ELECTRODE(S)**. As long as the button is pressed, no power is flowing to that channel.



This can be used for play or safety purposes.

For safety reasons, the **PES POWER BOX** & its accompanying **ELECTRODES** are to be used below the waist only. **CHANNEL A** or **B** can be used alone or in combination for any **ELECTRODE** or **ELECTRODES** (see under **CONFIGURATIONS** in the **GLOSSARY**). Also, for safety reasons, we recommend that only one person be attached to the **PES POWER BOX** at any one time.

13. On the right side of your **PES POWER BOX** is a **DIAL**. This is the **FINE FREQUENCY DIAL**.



Once all the other control knobs have been adjusted to the optimal settings for you, this **DIAL** can be used to **FINE-TUNE** the **FREQUENCY** of the stimulation by simply rotating the **DIAL**. This **DIAL** provides a deeper sensual stimulation. In simpler terms, it can make the sensations feel rougher or smoother when rotated.

P.E.S. Power Box Layout:



Glossary of Electro Stimulation Terms

Definitions of basic phrases & terms related to Erotic Electro Stimulation (EES)

EROTIC ELECTRO STIMULATION

This is the use of **LOW FREQUENCY ELECTRICAL IMPULSES** from a **GENERATING SOURCE** delivered to an **ELECTRODE** or **ELECTRODES** to enhance an individual's natural sexual response. It is also referred to as **ESTIM**, **ELECTRO SEX**, **ELECTRO STIM**, **ELECTRICAL STIMULATION**, or **EES**.

GENERATING SOURCE

This is the **POWER SOURCE** for the **EROTIC ELECTRO STIMULATION** also known as a **POWER BOX**, e.g. the **ORIGINAL PES POWER BOX**. It controls the **LOW FREQUENCY ELECTRICAL IMPULSES** being delivered to the body via the **ELECTRODE(S)**. Some use **MADE-FOR-PLAY BOXES**, **TENS UNITS**, or other **NMES-STYLE UNITS**.

ELECTRODE(S)

This is the device through which the **EROTIC ELECTRO STIMULATION** is delivered to the body. They are typically comprised of **CONDUCTIVE & NON-CONDUCTIVE** areas out of various **CONDUCTIVE MATERIALS**. These come in **SINGLE**-, **DOUBLE**-, **TRIPLE**-, or **QUADRUPLE-POLE** versions.

ELECTRODES are the **COCK RINGS**, **ANAL PLUGS**, **SELF-ADHESIVE PADS**, **DILDOS**, or other forms containing the **CONDUCTIVE SURFACES** that are applied to the erogenous zones.

A **SINGLE POLE ELECTRODE** requires a second **ELECTRODE** be used in circuit with it in order to function.

CONFIGURATION(S)

This is a combination of what **ELECTRODES** are being used & their placement on the body's erogenous zones for maximum efficacy.

LEADS

These are the wires that connect your **ELECTRODES** in circuit & plug into your **POWER BOX**. With the **PES PRODUCT LINE**, this is usually a pair of **LOW PROFILE LEADS**, but can also mean a pair of **PIN WIRE LEADS** with (or without) a **PIN TO PINCH ADAPTER** on them.

CONNECTOR(S)

This is the end of your **LEAD** that attaches to the **ELECTRODE(S)**. There are two on each pair of **LEADS**. Both of them need to be connected in order to create a complete circuit.

CONNECTION POINT(S)

The point on the **ELECTRODE** where the **LEADS** are attached. There are either one, two, three, or four of these on an **ELECTRODE**, depending on whether it is **SINGLE**-, **DOUBLE**-, **TRIPLE**-, or **QUADRUPLE-POLE**.

FULL CONTACT

An important part of successful **EROTIC ELECTRO STIMULATION** is **CONTACT**. In regards to all **ELECTRODES**, whenever a space is created between the **ELECTRODE** & the contact area (skin or muscle tissue), electricity will arc over that space. This creates a slight "zapping" sensation that can be uncomfortable, & very undesirable for some users.

HOT SPOTS

Occasionally, you will read cautions about how to prevent **'HOT SPOTS'**. These unpleasant sensations are caused by too little lubrication, unshaven pubic hair, contact with metal (such as jewelry), or by not achieving full contact between the electrode & the skin.

'HOT SPOTS' may not occur under all of these conditions for everyone. If you experience a **'HOT SPOT'**, read your directions pertaining to the **ELECTRODE** in use, & the problem should easily be made clear, & solved with one or two simple corrections in use.

HFO

This is the abbreviation for **'HANDS-FREE ORGASM'**, which is an orgasm where no physical contact from your hands or someone else's hands is needed with the genitals in order to achieve climax. With **ELECTRO STIMULATION**, it is an orgasm achieved by **ELECTRODE** placement combined with the settings of your generating source & no manual or oral manipulation of the genitals.

More information can found on the P.E.S. website:
[HTTPS://WWW.PESELECTRO.COM](https://www.peselectro.com)
under the **'INFORMATION'** links at the bottom of the **HOME PAGE**.
Specifically under the
'PRODUCT SAFETY & INFORMATION LINKS'.



The **ORIGINAL PES POWER BOX** shown above with the **BASIC CORONA "COCKHEAD" STIMULATOR** in circuit with the **ANAL TUBULAR** on **CHANNEL A** & a single pole **ELECTRO-FLEX™ PENILE RING** on the green wire and plugged into **CHANNEL B** for a **3-ELECTRODE CONFIGURATION**.
ELECTRODES sold separately.

Safety and Warranty Information – Please Read Carefully!

The safety of our customers has always been of primary concern to PARADISE ELECTRO STIMULATIONS, INC. In that regard, here are the primary safety considerations for users of the ORIGINAL PES POWER BOX with its various ELECTRODES.

ELECTRICAL SAFETY:

- NEVER use any PES ELECTRODE(S) or the ORIGINAL PES POWER BOX above the waist.
- PES, INC recommends that the COARSE & FINE KNOBS be turned to 'T' & the ORIGINAL PES POWER BOX be turned off before adjusting, removing or reinserting any PES ELECTRODE(S). This prevents the rapid depolarization of the nerve endings. (Rapid depolarization feels like a shock & you need to avoid this with any form of EROTIC ELECTRO STIMULATION.)
- IF CONTACT BETWEEN THE ELECTRODE(S) & BODY IS LOST AT ANY TIME, IMMEDIATELY TURN OFF THE ORIGINAL P.E.S. POWER BOX BEFORE REAPPLYING OR REINSERTING THE ELECTRODE(S).
- PES, INC PRODUCTS are specifically designed & engineered to work exclusively with PES, INC technology/products to optimize the EROTIC ELECTRO STIMULATION effect safely & effectively.
- Only one person should be connected to the ORIGINAL PES POWER BOX at any one time.
- DO NOT USE THESE DEVICES IF ANY OF THE FOLLOWING APPLIES: you have a pacemaker; you have a history of heart problems; you are prone to epileptic seizures; you have a penile prosthesis; fever is present; if you have any internal or external injuries; if you have any inflamed or swollen areas; if you have skin lacerations or open wounds; or you are pregnant. Do not apply directly to any body piercing. If you have any further medical concerns, please ask your physician. Do not use this device if your physician has advised against the use of low frequency electro stimulation.
- Do not use in or near water.

CLEANING & CARE OF YOUR ORIGINAL PES POWER BOX & ELECTRODES:

Do not use any solvents to clean the ORIGINAL PES POWER BOX. Using a damp cloth or towel will suffice.

You may clean your PES ELECTRODE(S) with a solution of 10% household bleach & 90% water with a few drops of mild dishwashing liquid added. Do not soak. For additional disinfection, use a product like SWISS NAVY TOY & BODY CLEASER after washing with soap & water. DO NOT use Isopropyl Alcohol on any of the clear Acrylic vaginal or anal products.

LUBRICATION:

PES, INC recommends the use of a proper lubricant with all PES ELECTRODES. A good lubricant not only lubricates, but also can decrease the possibility of hot spots. PES ELECTROLUBE not only lubricates, but also has conductive properties & can increase the strength of the EROTIC ELECTRO STIMULATION by as much as 40% by lowering the skin's resistance.

You can also adjust & balance the EROTIC ELECTRO STIMULATION by increasing the conductivity of a particular electrode or an area of that electrode by simply applying more PES ELECTROLUBE to the skin beneath. For urethral devices, such as the SPARKLER, BIG BOY SPARKLER, DEEP THROAT SLIM JIM, DEEP THROAT BIG JIM, & the CORONA STIMULATOR WITH URETHRAL AMPLIFIER, we strongly recommend the use of STERILE LUBRICATING JELLY. Water-based lubricants, such as STERILE LUBRICATING JELLY, can be used as an alternative if you do not have a conductive lubricant, such as PES ELECTROLUBE.

NOTE: DO NOT use any silicone-based lubricants. Silicone is an insulator &, thus, reduces the conductivity of the ELECTRODE. With ELECTRO-FLEX™ PRODUCTS silicone-based lubricants may cause permanent damage to the ELECTRODE(S). Glycerin-based or mineral oil-based lubricants should also be avoided because they tend to dry out rapidly & become sticky & can thus decrease the sensations of the EROTIC ELECTRO STIMULATION.

OVERSEAS 220 VOLT A/C ADAPTER (supplied by PES, INC)

The ORIGINAL PES POWER BOX is manufactured to operate on a standardized U.S. electrical current. It can be powered with a 9 VOLT BATTERY but an A/C ADAPTER gives greater and more consistent power. In order for Overseas Customers to operate the ORIGINAL PES POWER BOX properly, PES has invested in an A/C ADAPTER that will work universally. This 12 VOLT 1.5 AMP ADAPTER is rated for input of 100 volts to 240 volts 50/60Hz .4Amp. It is center pole positive and works in the U.S. as well as overseas. It comes with blades for plugging into wall outlets in North America or the EU, so customers outside of those areas will need to purchase the correct blade adapter for the wall outlets in their country (not supplied by PES).

PES, INC. is not responsible for the misuse of the adapter and voltage guidelines set forth in this notice. The PES supplied A/C ADAPTER is available for purchase on the chance a replacement is needed. In the event these guidelines are violated, all warranties on the ORIGINAL PES POWER BOX will be null and void.

WARNING:

THESE PRODUCTS ARE FOR ADULT NOVELTY USE ONLY. THERE ARE NO IMPLIED MEDICAL CLAIMS WARRANTED OR IMPLIED BY THE USE OF THIS PRODUCT.

LIABILITY:

PARADISE ELECTRO STIMULATIONS, INC will not be liable for any damage, mishap, or injury resulting from the use of PES PRODUCTS. By using our products, you acknowledge that you have read the safety information contained herein, and the directions for use of these devices, and you accept responsibility and liability for your actions.

WARRANTY:

Due to the personal nature of the products and for hygienic reasons, there are no returns or refunds on any of the ELECTRODES.

We offer a 30-DAY WARRANTY on all products against manufacture defect. In the event of a defect, you must contact us by email: PESQUESTIONS@PESELECTRO.COM or phone: (702) 474-2991 (or (800) 339-6953-US only) for a return manufacturer authorization number. Any product received without an RMA# included on the mailing label will be returned unopened. Repair/replacement is available beyond the warranty period but there may be charges.

NOTE: ANY PRODUCT SHIPPED/RETURNED FOR EVALUATION MUST BE CLEANED & DISINFECTED THOROUGHLY BEFORE BEING SENT IN TO US. THANK YOU FOR YOUR CONSIDERATION.

Within the FIRST 30-DAYS the ORIGINAL PES POWER BOX, only, may be returned for a full refund minus a 15% restocking fee. You must return the POWER BOX, AC ADAPTER, & LEADS (2 pairs of Low Profile Leads). This refund applies only to the ORIGINAL PES POWER BOX.

NO RETURNS, REFUNDS, OR EXCHANGES WILL BE ACCEPTED ON PES ELECTRODES OR ACCESSORIES.

NOTE: PES, INC products are specifically designed and engineered to work exclusively with PES, INC technology/products to optimize their function and safety. USE OF PES ELECTRODES, POWER BOXES, OR LEADS WITH POWER SUPPLIES, ELECTRODES, OR LEADS OTHER THAN PES ELECTRODES, POWER BOXES, OR LEADS MAY DAMAGE THESE DEVICES, CAUSE INJURY, & WILL VOID ALL WARRANTIES, EXPRESSED OR IMPLIED.

COPYRIGHT © 2002-2010

THE CONTENTS OF THIS MANUAL, INCLUDING ALL PICTURES & TEXT ARE COPYRIGHTED, & THE SOLE PROPERTY OF PARADISE ELECTRO STIMULATIONS, INC. & MAY NOT BE REPRODUCED WITHOUT THE WRITTEN PERMISSION OF PARADISE ELECTRO STIMULATIONS, INC.